

HOW TO CHECK YOUR METER FOR A LEAK



On a 5/8" meter the max flow is 25 gal/minute

Flow will show in bottom left corner when water is being registered through the meter

A Leak Code will show at a 2% loss per minute

A Burst Code will show at a 3% loss per minute

Other codes listed in the picture above will show if triggered

How to check for a leak: When the customer shut off valve is turned off, the word Flow will disappear from the screen---unless your shut off valve is not working.

If there is a leak on the WSC side, water will start leaking around the pipe that enters the meter.

Turn the valve back on, if you have a leak on your side the word Leak will appear, if the leak is 10% or more then the word Burst will appear. Either means YOU have a leak. You should turn off the water and call a plumber.